

# NES EPROM GUIDE




Created by FishyFace Games

# UNROM

**CHR**




**PRG**


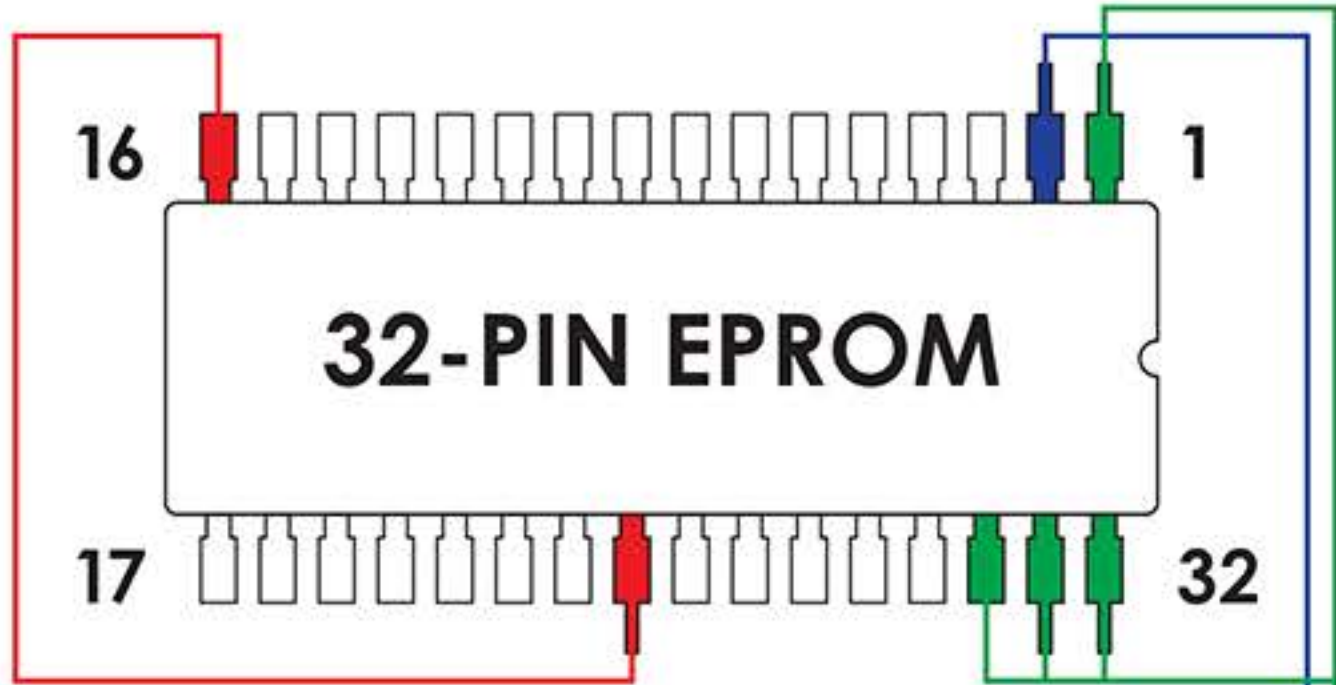


# SG/SN/SOROM

**CHR**

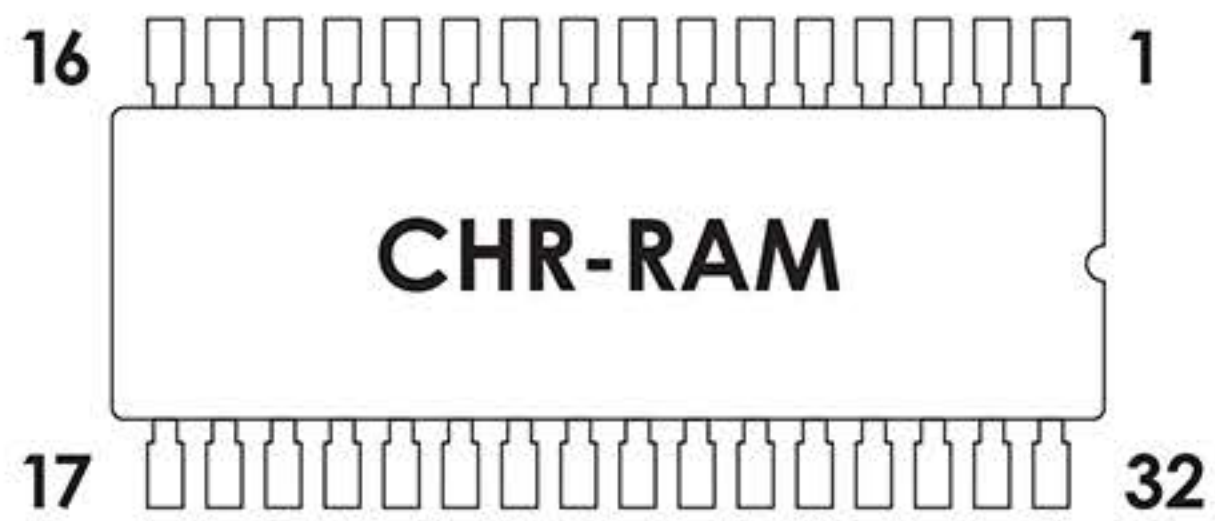


**PRG**

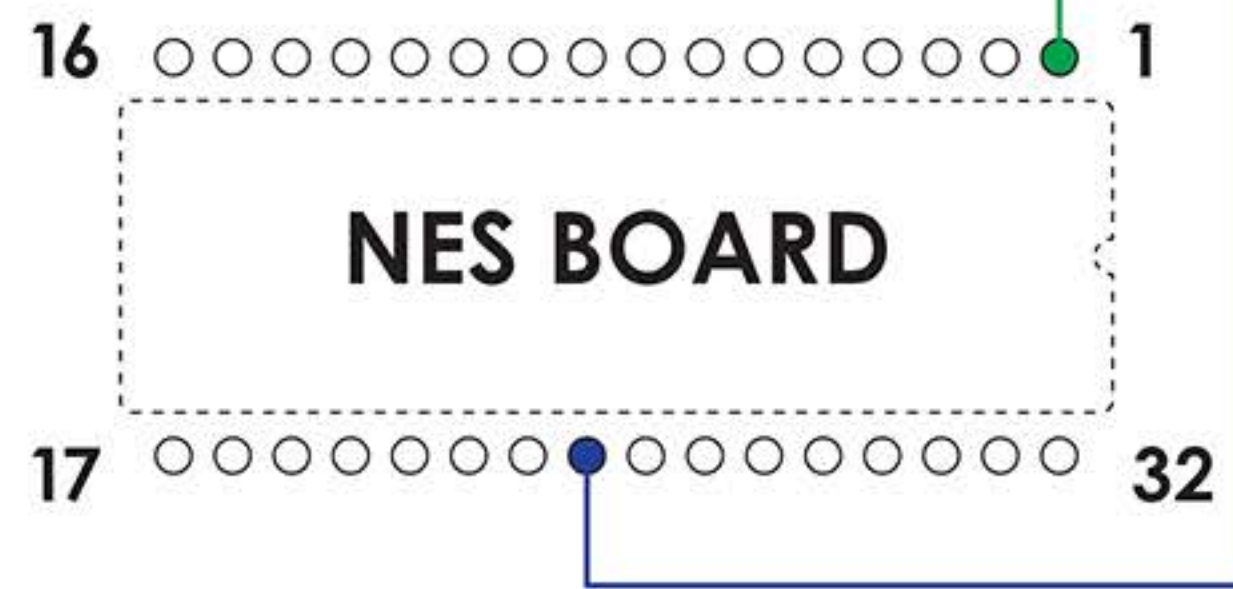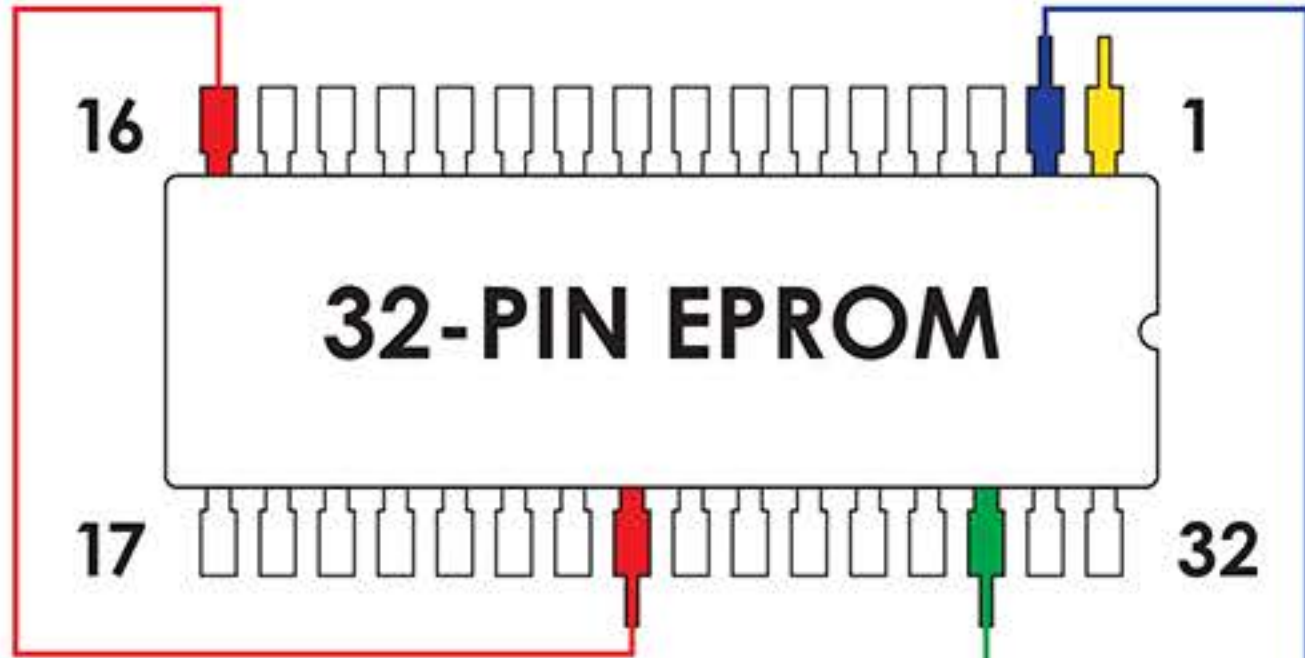


# SA/SF/SJ/SK/SLROM

**CHR**

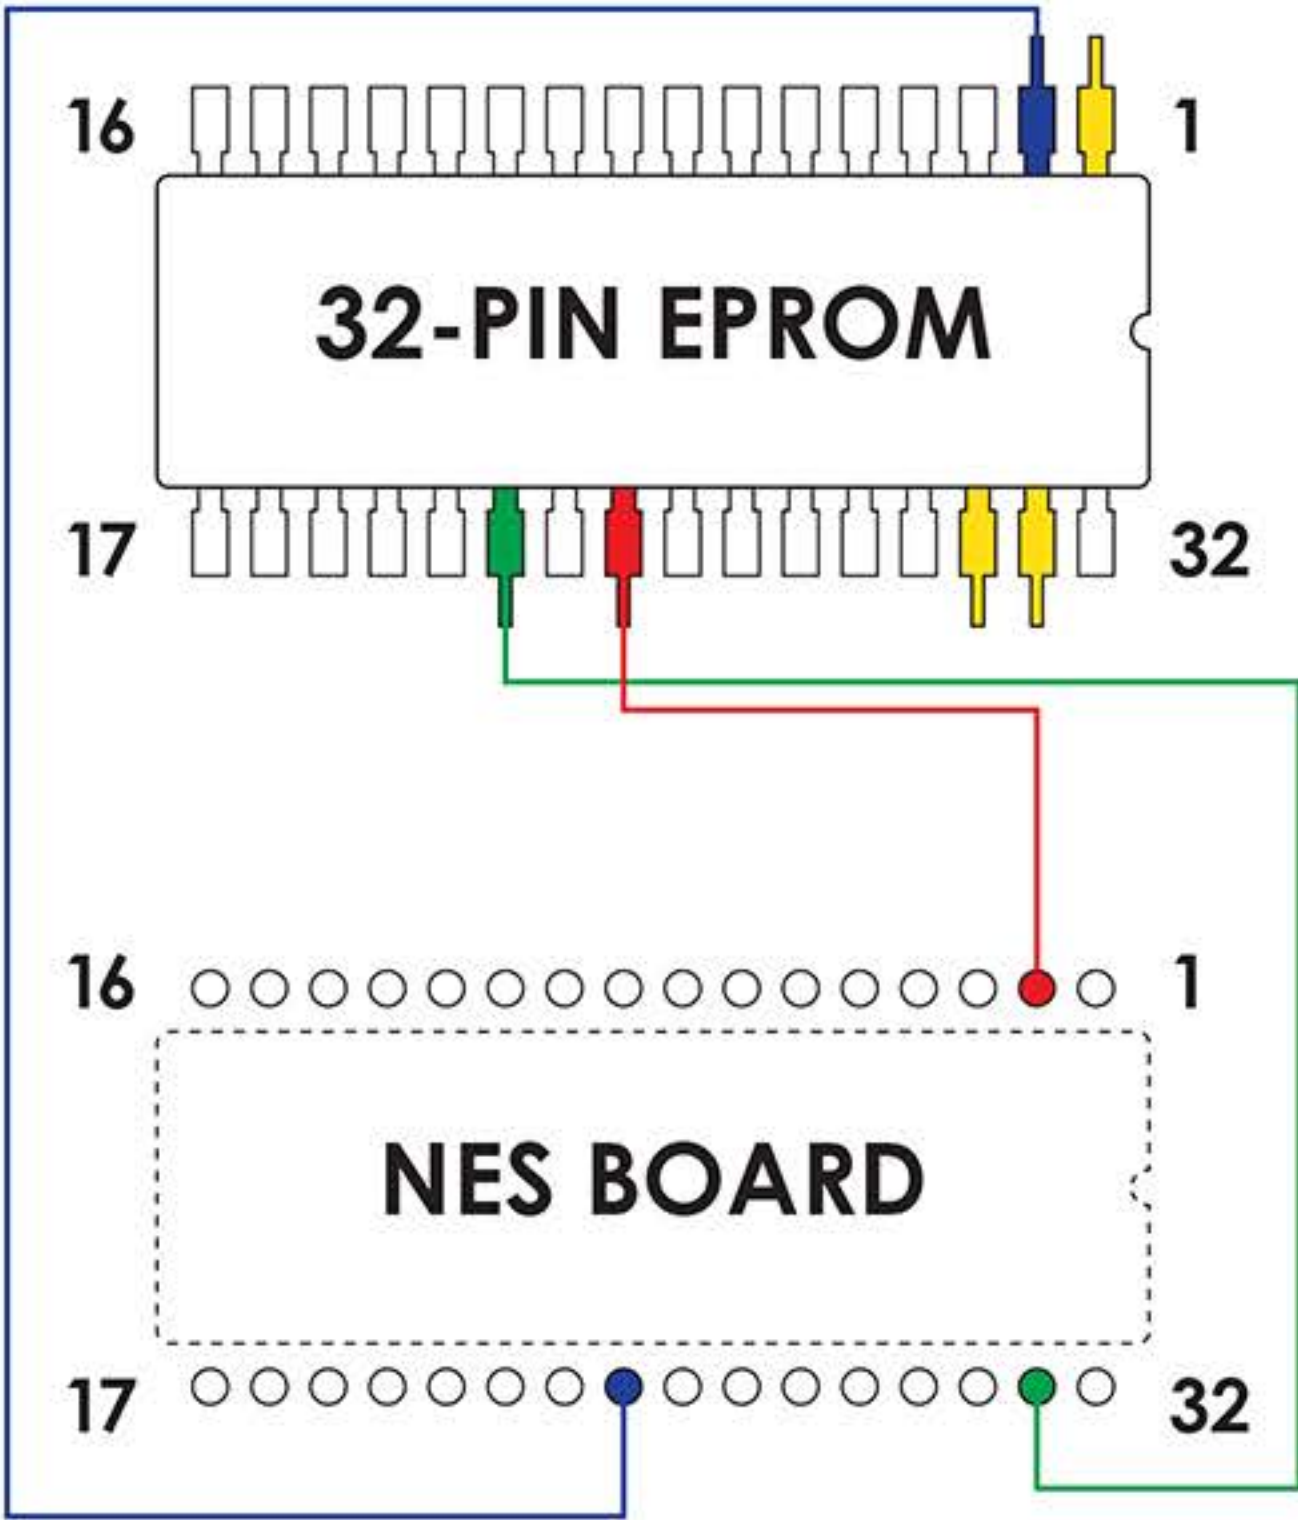


**PRG**

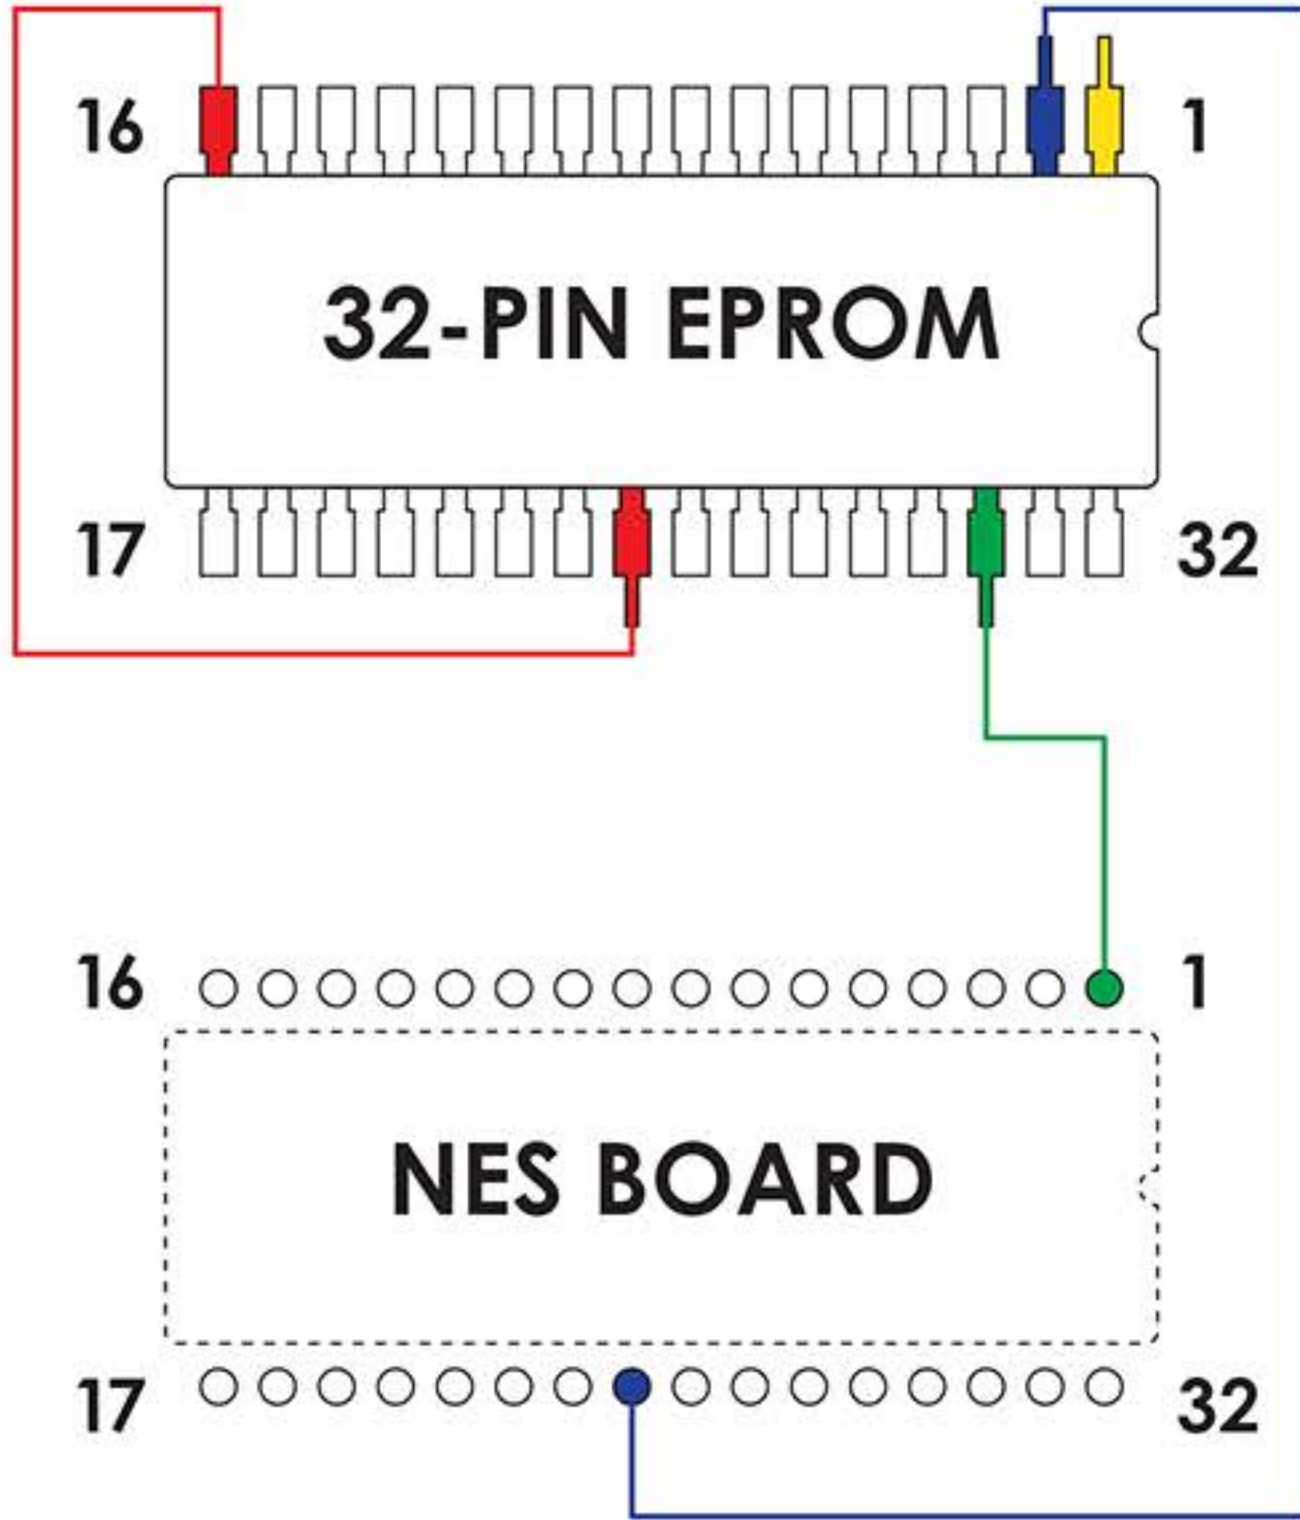

# SOROM to SNROM rewire

**MMC1**


**WRAM**

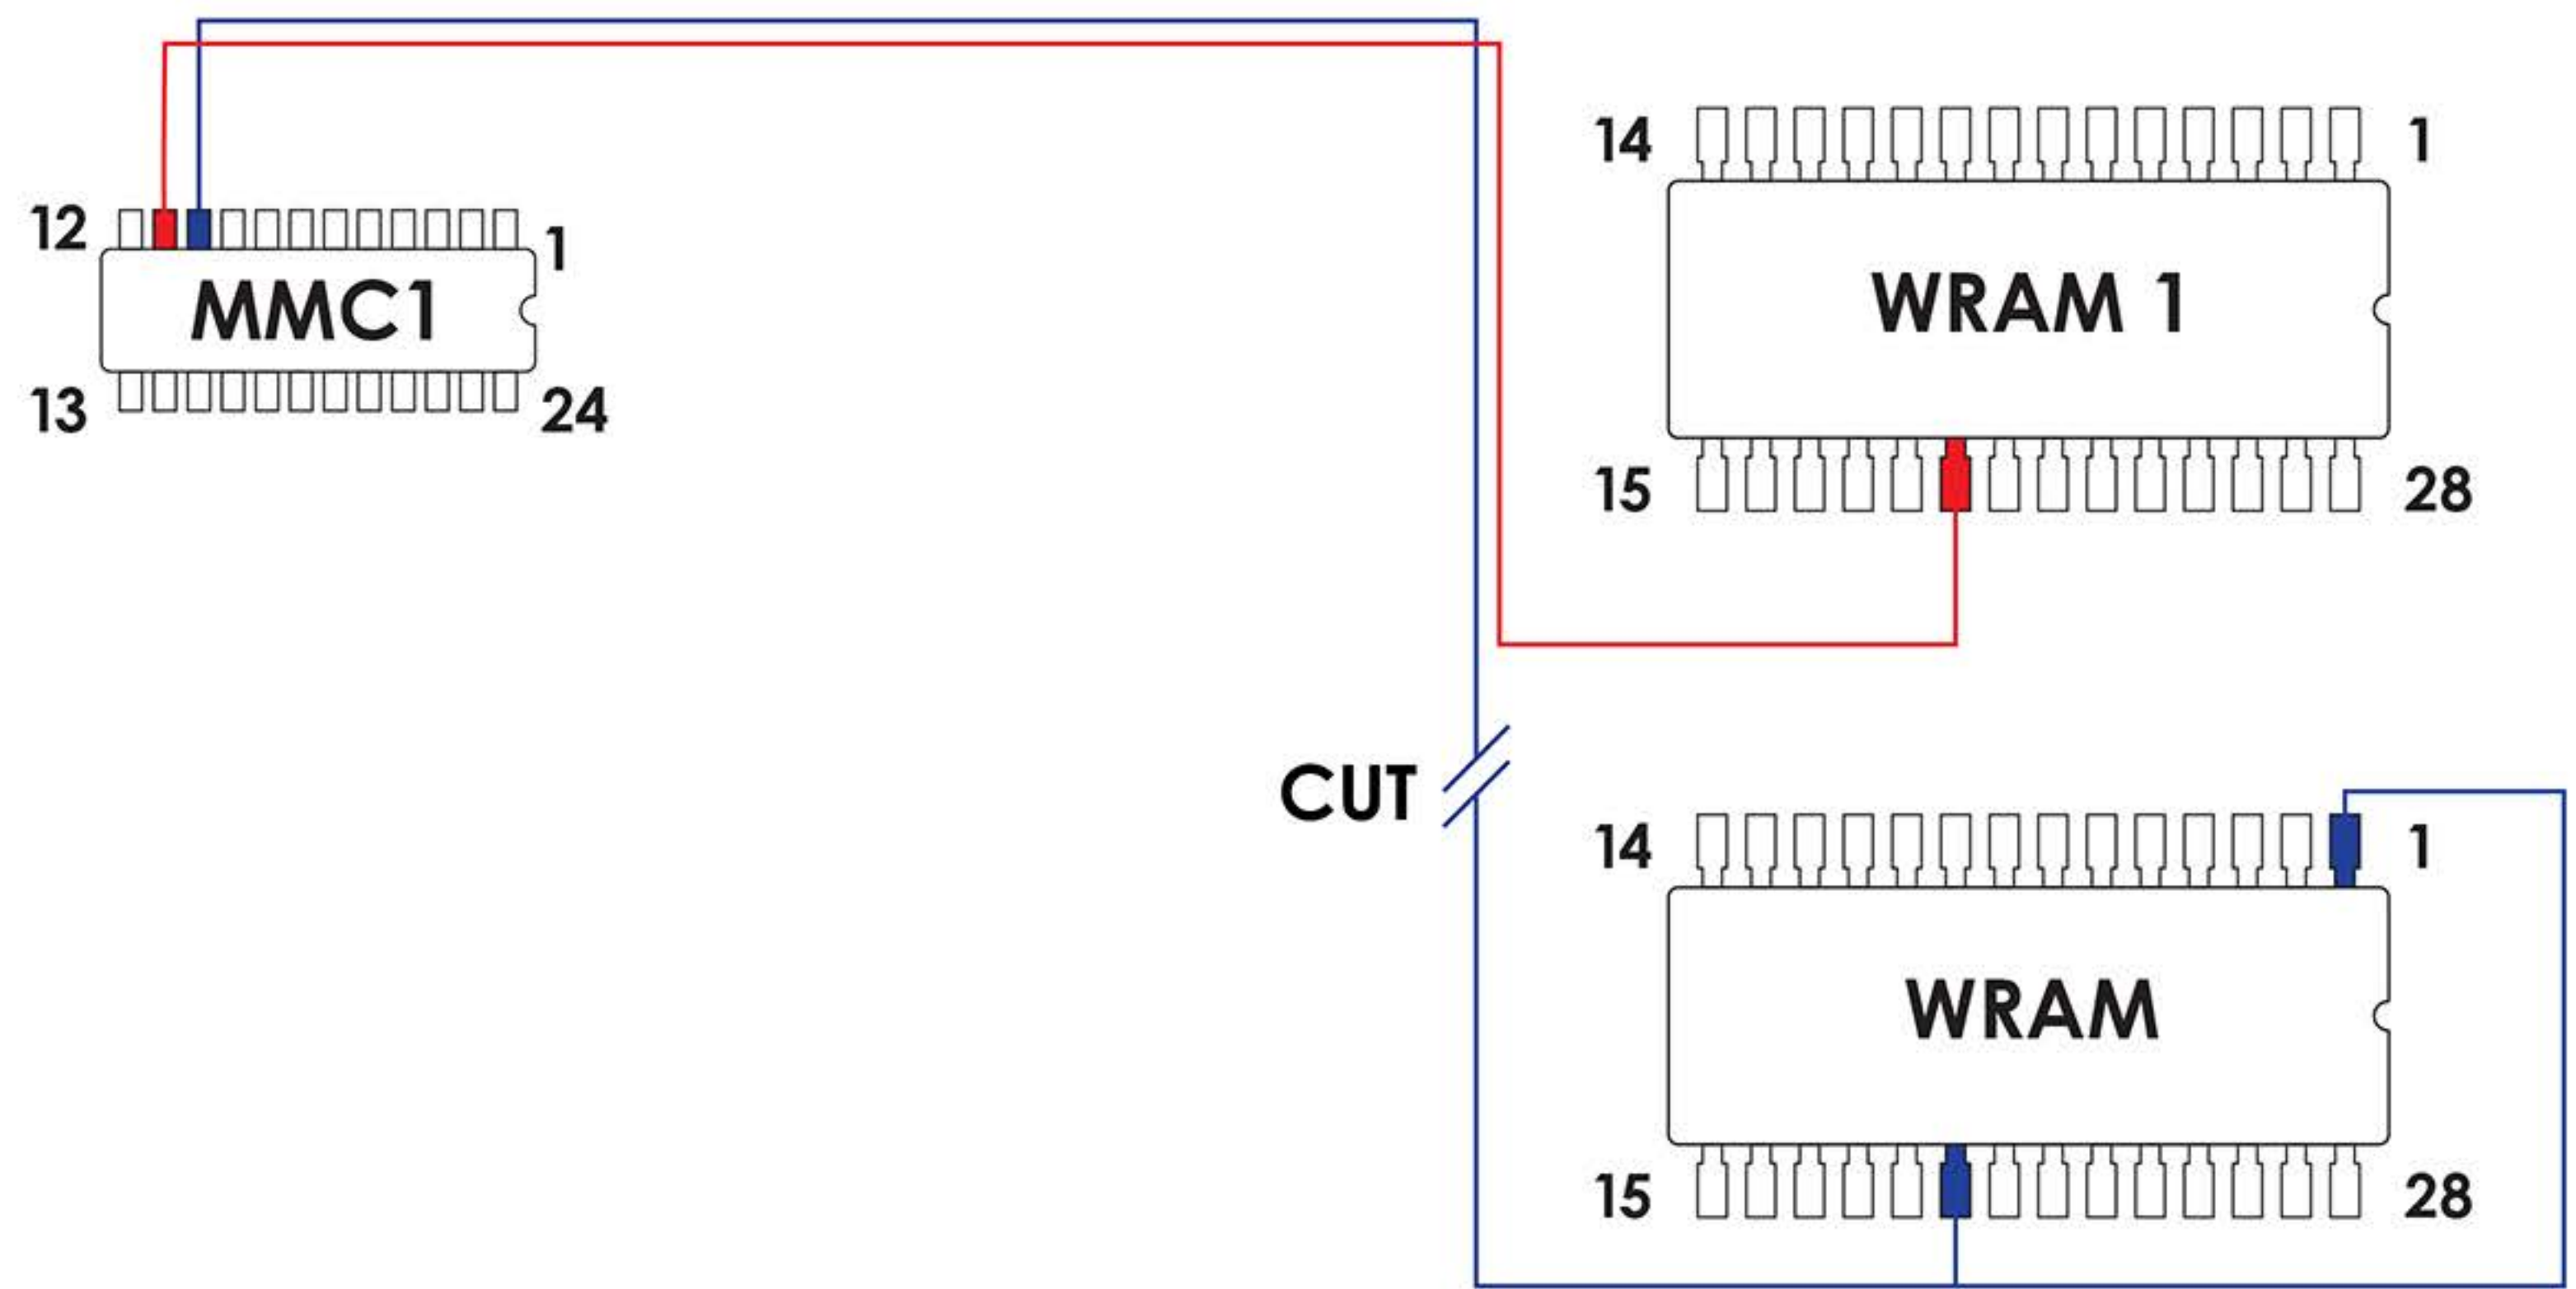




# TxROM

**CHR**

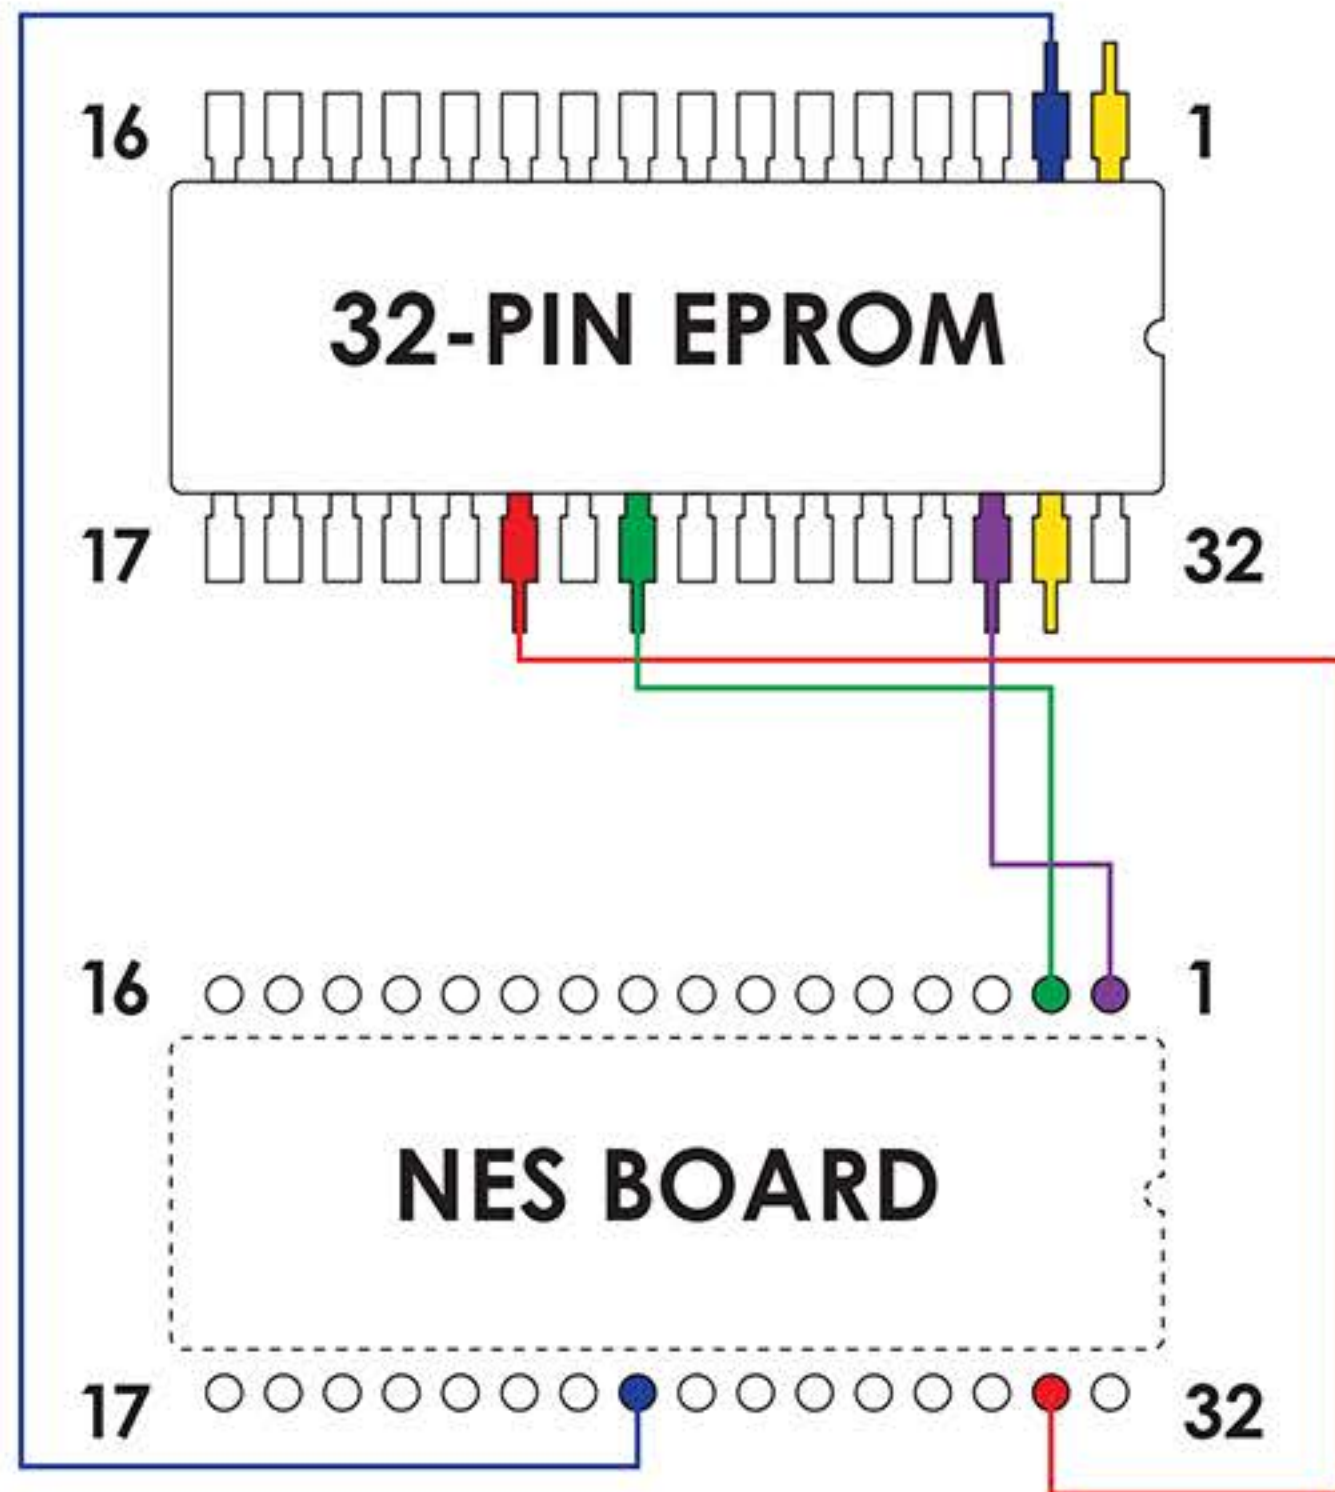

**PRG**


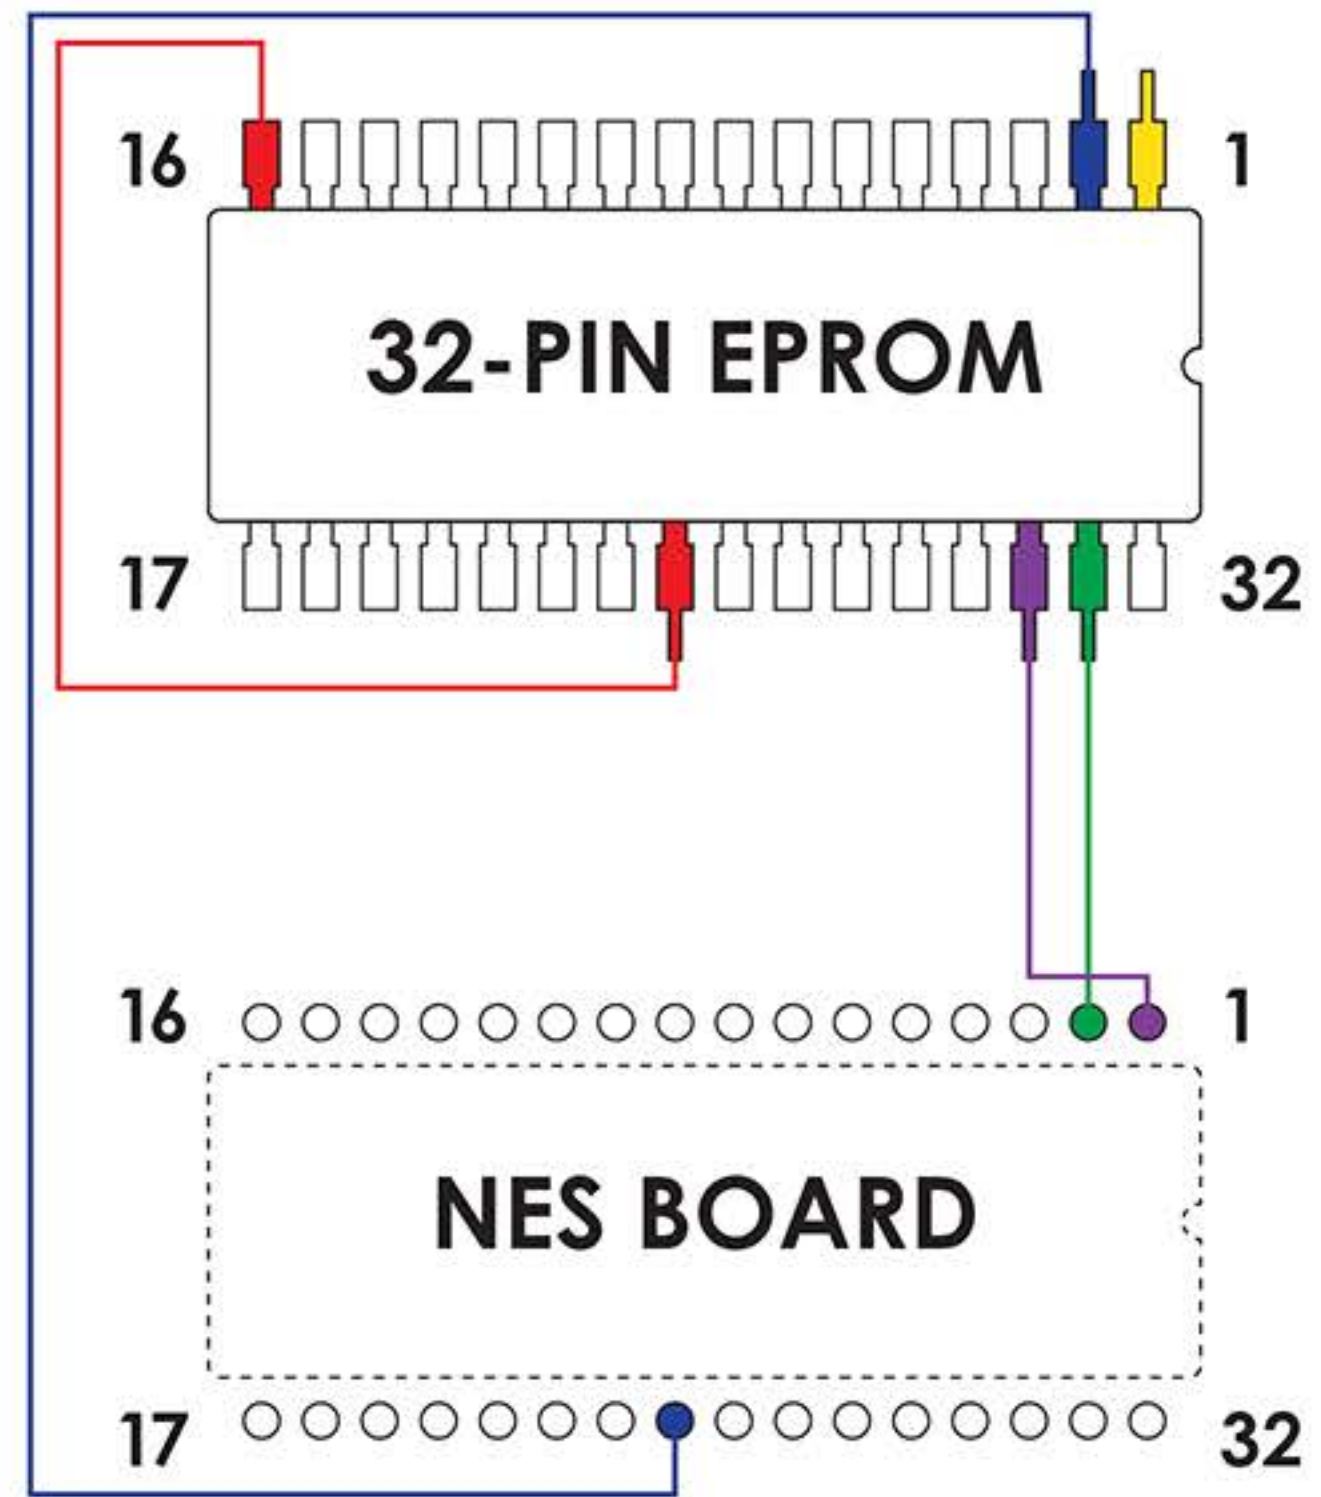


# ExROM

**CHR**

**\*ROMS MUST BE SWAPPED\***


**PRG**

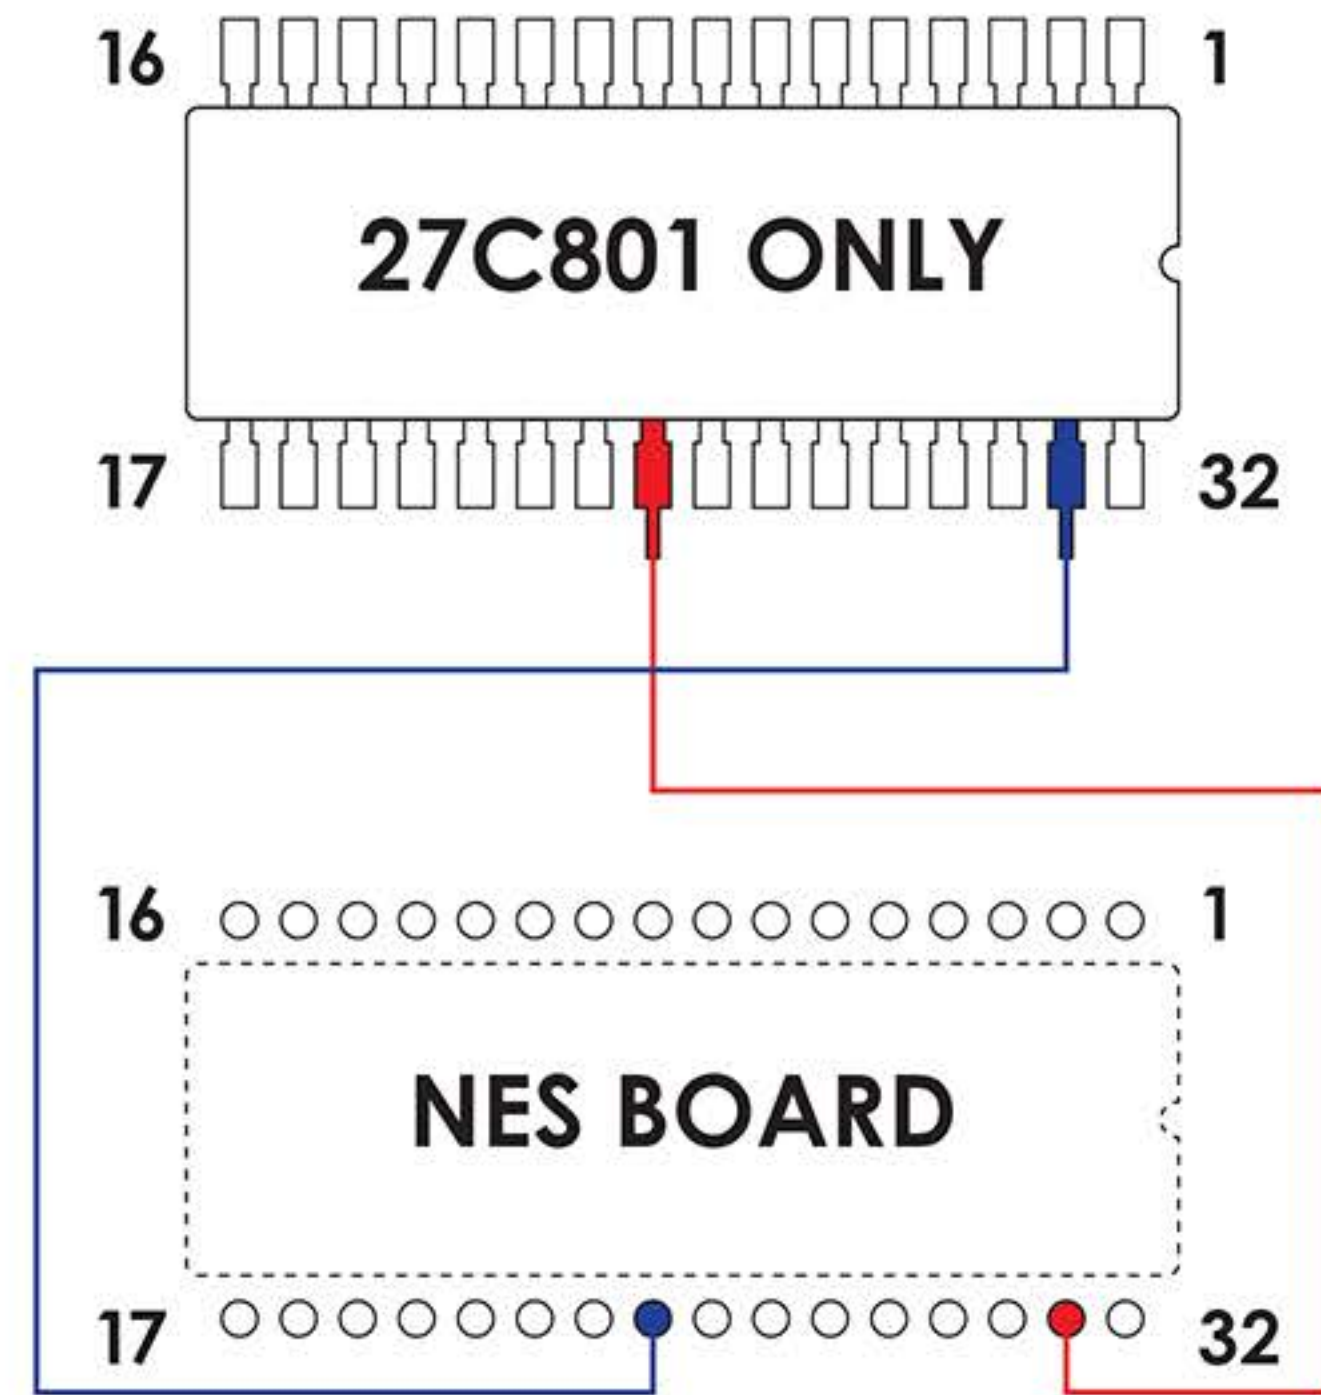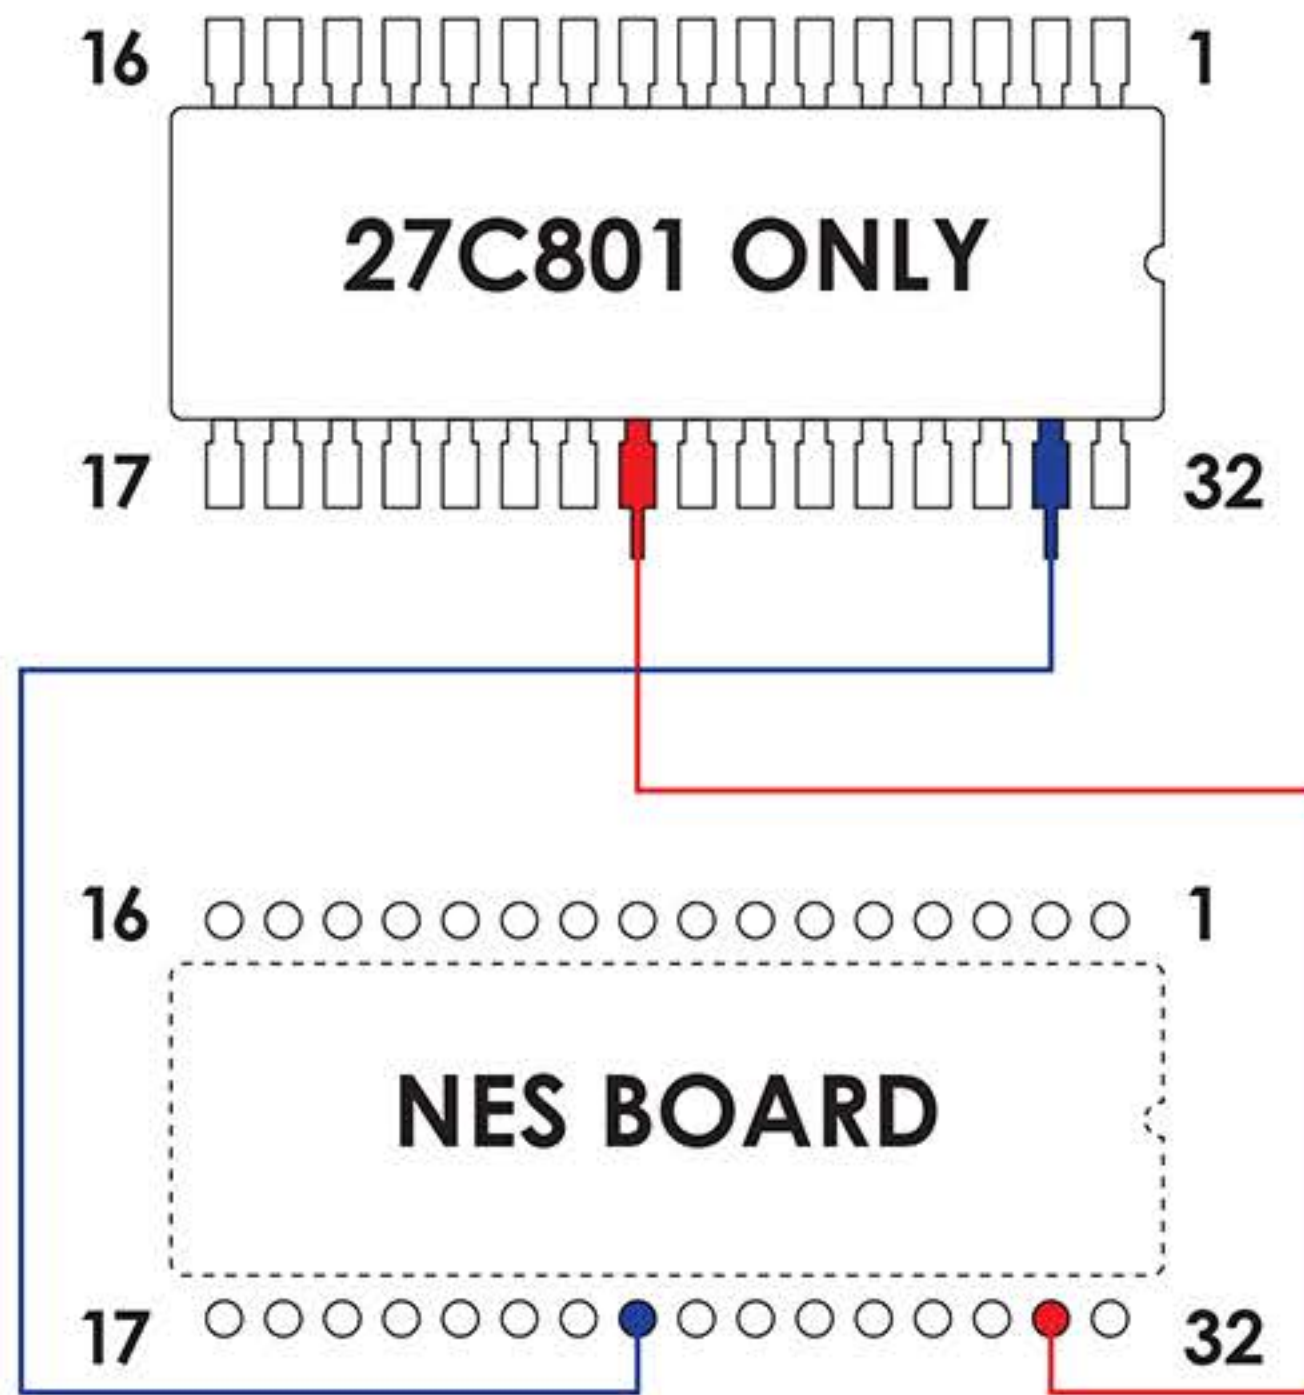




# ExROM

**CHR**

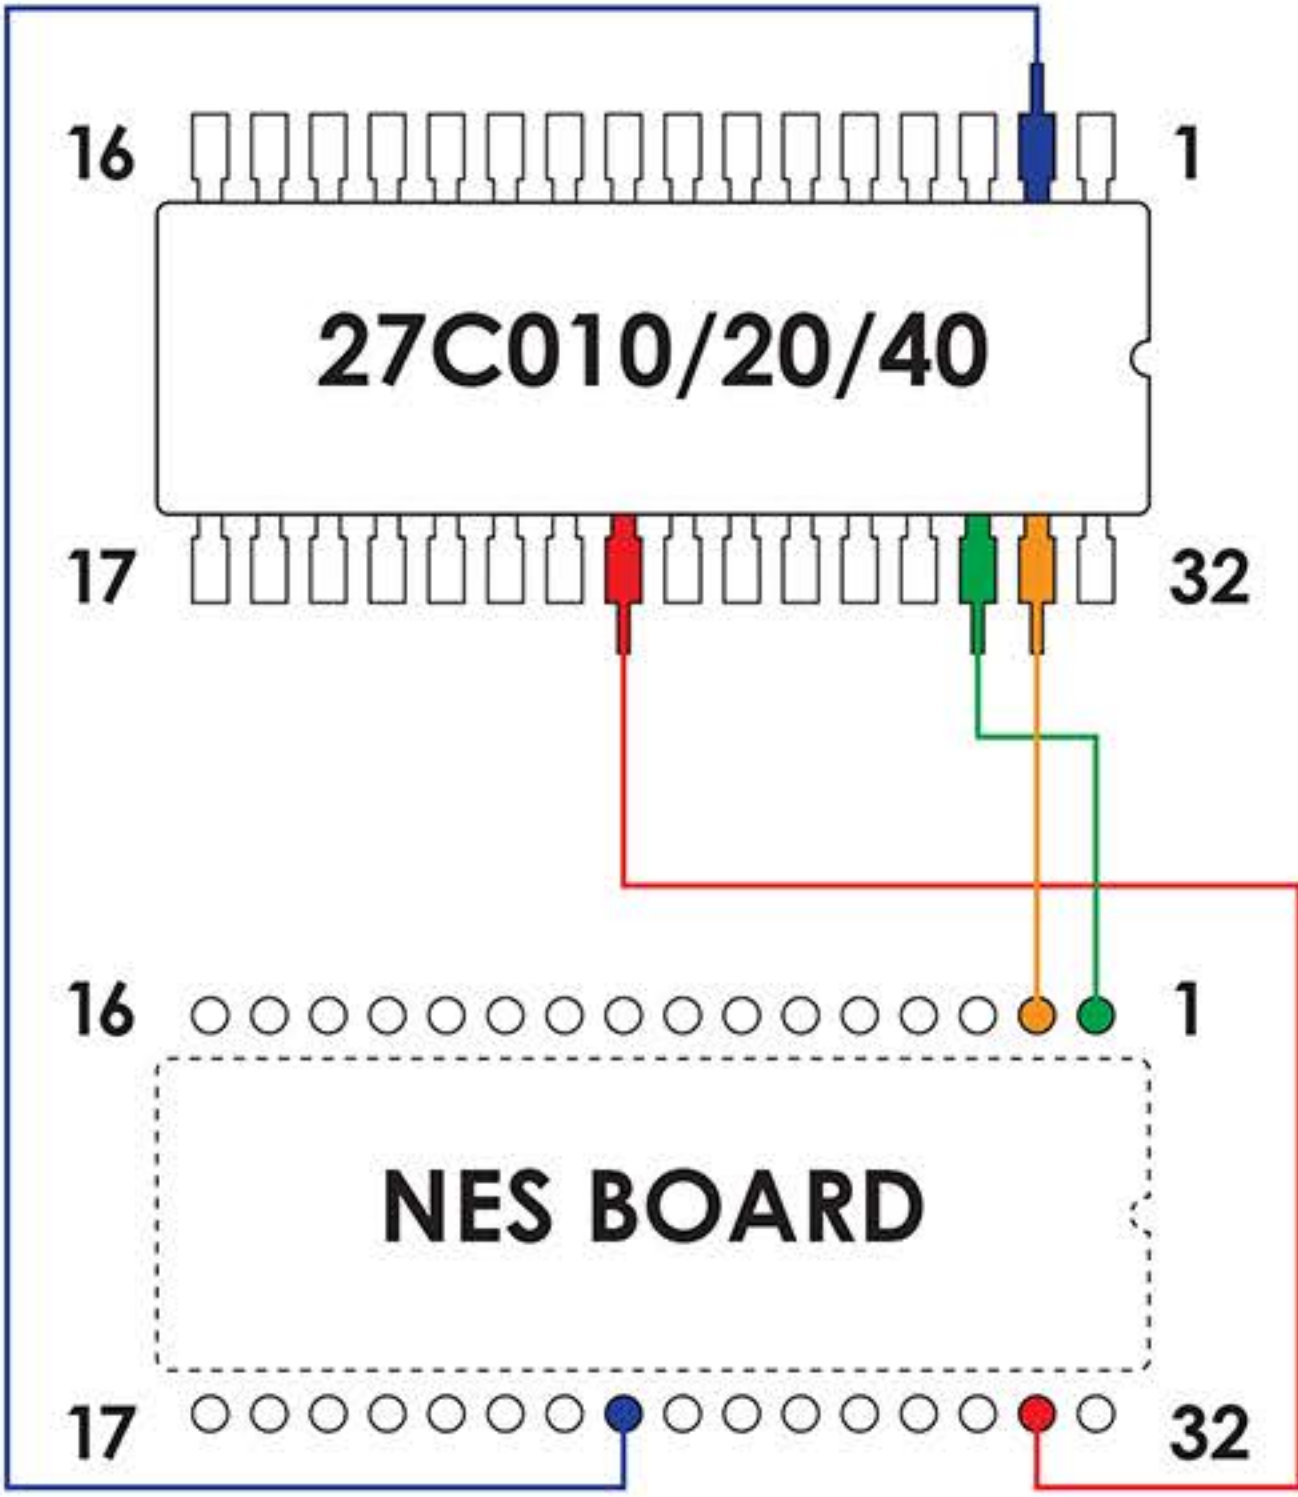

**PRG**

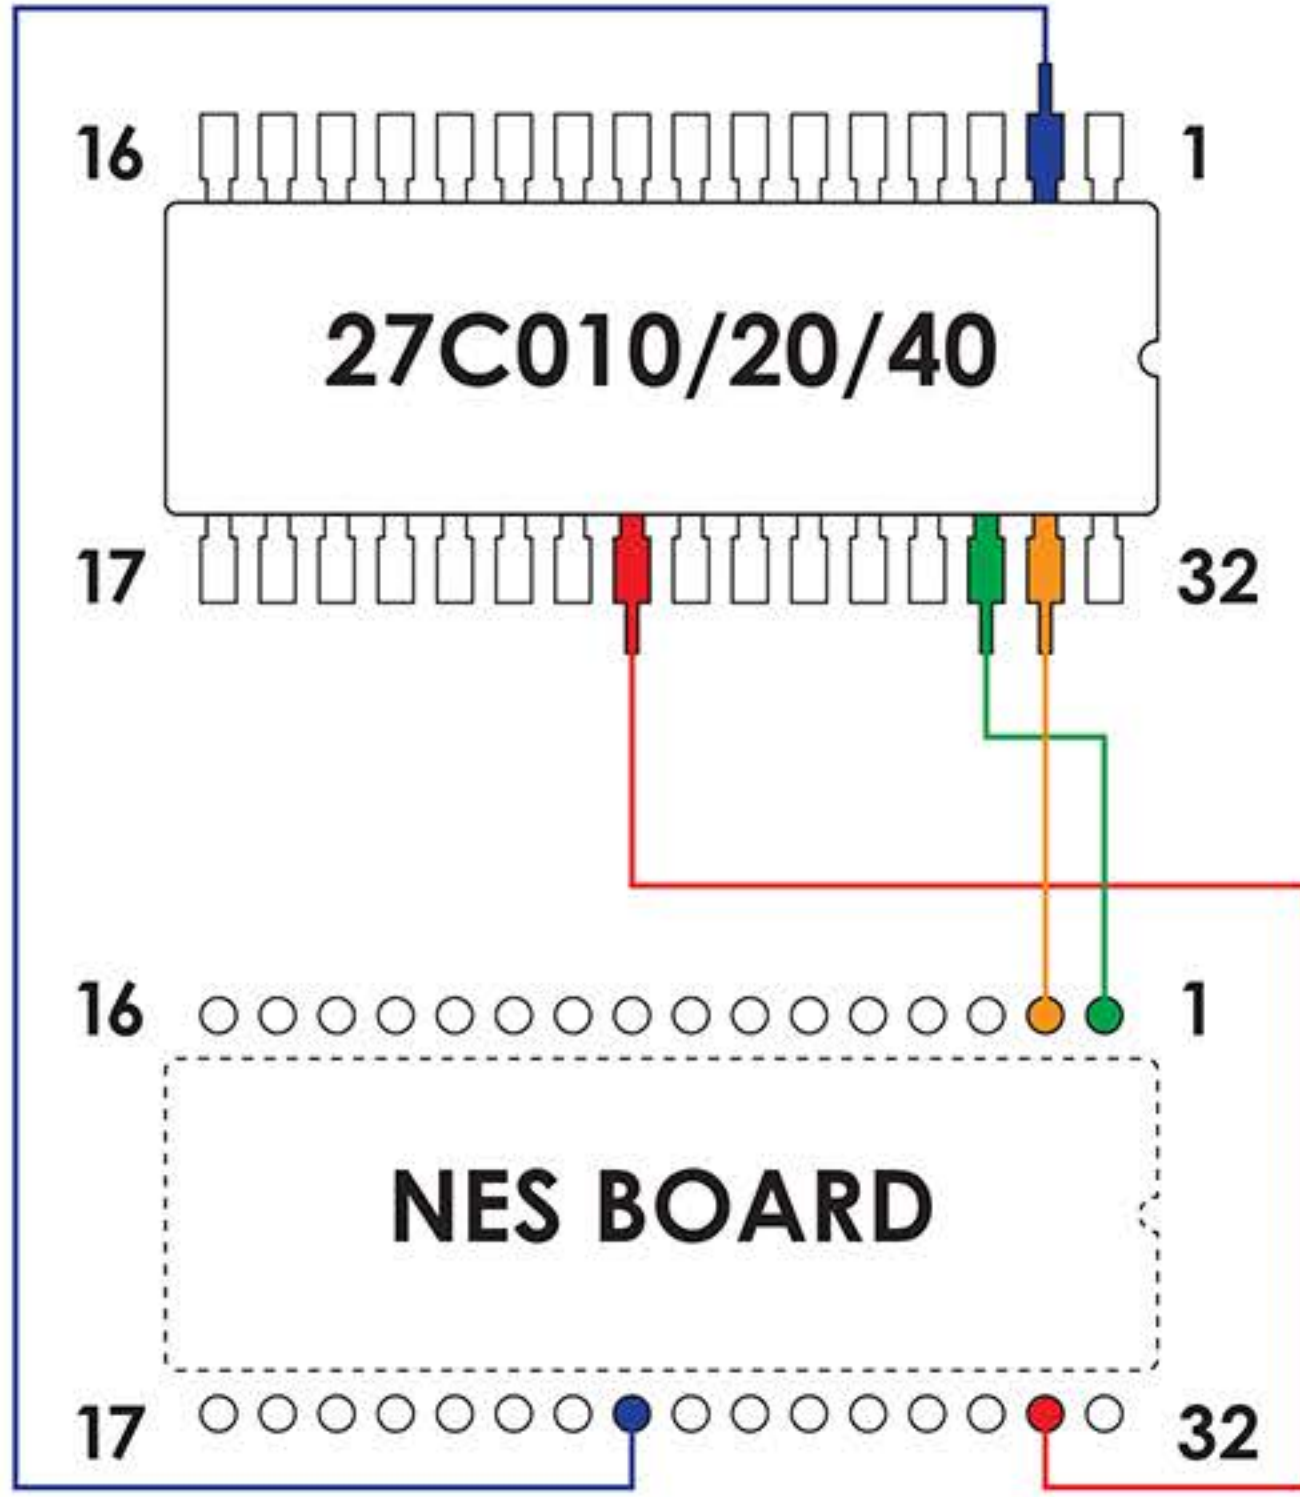



# EW1 ROM rewire

**PRG**  
**BACK**

**\*ROMS MUST BE SWAPPED\***

**PRG**  
**FRONT**

